
Inlet

•Bypass spring tension can be adjusted externally by adjusting the external screw.

Bypass

•When the pressure inside the magnet cup exceeds the force of the bypass spring, the poppet is pushed from its 'seat'.

This allows fluid to move through the auxiliary passage to

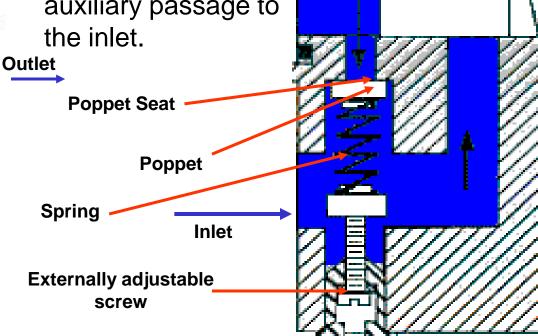

Arrows in black indicate fluid movement





OFFICIAL DISTRIBUTORS FOR:



A Unit of IDEX Corporation

Viking Gear Pumps



Liquiflo Gear Pumps







Micropump Gear Pumps



HNP Gear Pumps



Hydra-Cell High Pressure Diaphragm Pumps



M Pumps, Centrifugal, Turbine and Vane Pumps



Ismatec Peristaltic Pumps



Fluid Metering Piston Pumps